

4 LEG STOOLS





Albury Side, Albury Arm, Chevron & Stockholm Metal Stools



scan me

PARTS:

TOOLS (NOT INCLUDED):

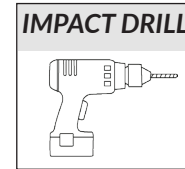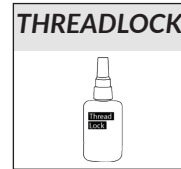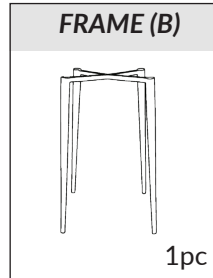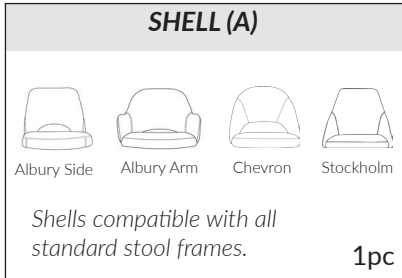

We strongly recommend applying thread lock to the full length of all screws and using an impact drill. Scan the QR code with a phone or tablet to access the assembly video.

WARNING:

Always take care with an impact drill gun, especially when screwing into the frame.

INSTRUCTIONS:

