

BONN


750mm Timber Stools

ez ASSEMBLY
INSTRUCTIONS




SCAN ME

PARTS:

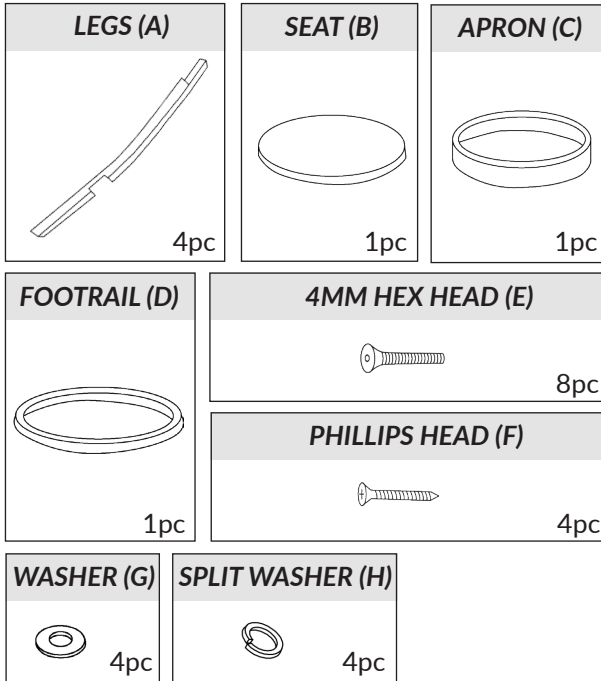

TOOLS (NOT INCLUDED):

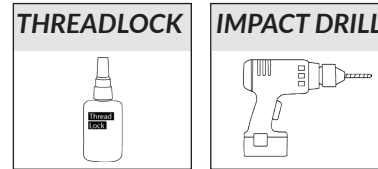

We strongly recommend applying thread lock to the full length of all screws and using an impact drill.

WARNING:

The warranty is voided for clients who assemble the product. Always take care with an impact drill gun, especially when screwing the seat into the frame.

INSTRUCTIONS:

