
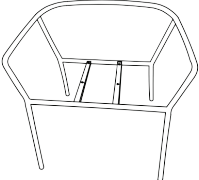






WRAP FRAME

Bronte Wrap Chair

PARTS:

SHELL (A)  1pc	FRAME (B)  1pc
4MM HEX HEAD (C)  4pc	
WASHER (D)  4pc	

TOOLS (NOT INCLUDED):

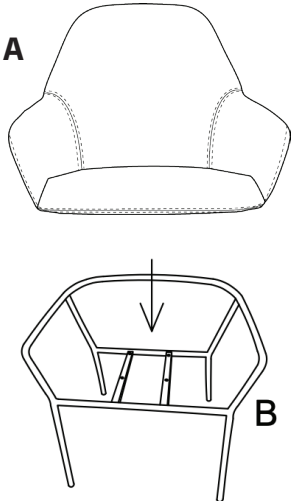
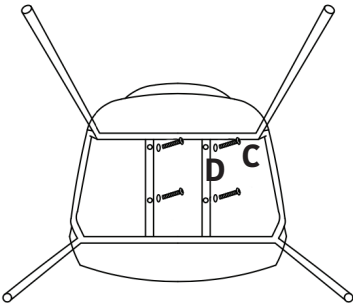
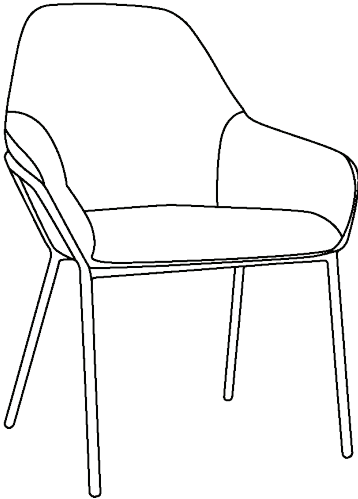
THREADLOCK 	IMPACT DRILL 
--	--

We strongly recommend applying thread lock to the full length of all screws and using an impact drill.

WARNING:

Always take care with an impact drill gun, especially when screwing into the frame.

INSTRUCTIONS:

STEP 1: 	STEP 2: 	COMPLETE: 
---	---	---