
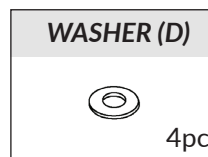
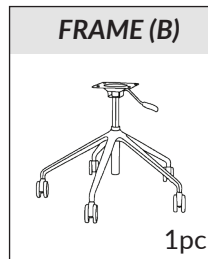




# CASTOR FRAME

Albury Side, Albury Arm, Chevron & Coogee Metal Chairs

## PARTS:

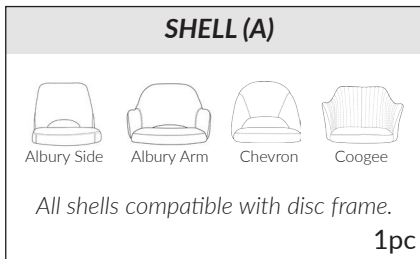

## TOOLS (NOT INCLUDED):

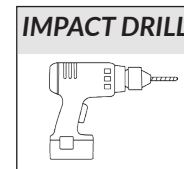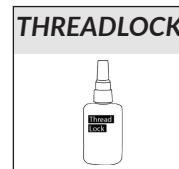

We strongly recommend applying thread lock to the full length of all screws and using an impact drill.

### WARNING:

Always take care with an impact drill gun, especially when screwing into the frame.

## INSTRUCTIONS:

