

PHOENIX












Timber Chairs & Stools

ez ASSEMBLY
INSTRUCTIONS







scan me

PARTS:

FRAME (A)  1pc		BACK (B)  1pc
DOWEL (D)  2pc	PLUG (E)  4pc	WASHER (F)  4-8pc
SEAT (C)  1pc		SPLIT WASHER (G)  4-8pc
HEX HEAD L25MM (H)  *Veneer Back (with washers) 4pc		HEX HEAD L30MM (I)  *Upholstered Back (no washers) 4pc
HEX HEAD L75MM (H)  *Veneer Seat (with washers) 4pc		HEX HEAD L80MM (H)  *Upholstered Seat (with washers) 4pc

TOOLS (NOT INCLUDED):

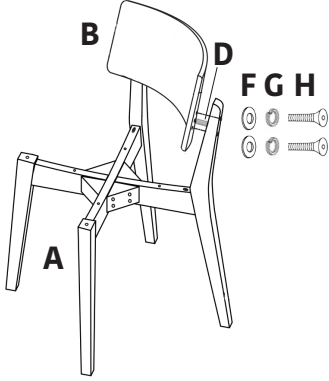
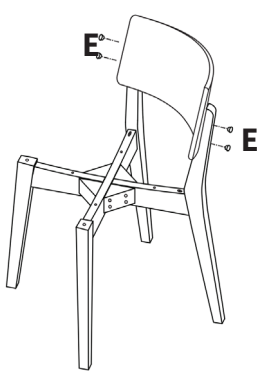
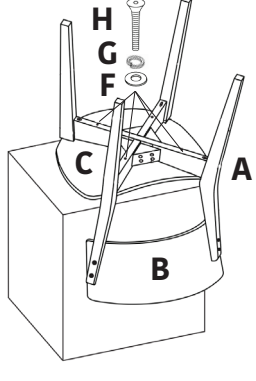
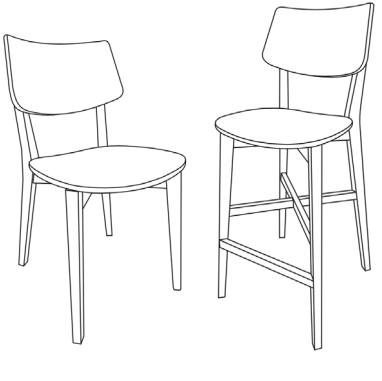
THREADLOCK 	WOOD GLUE 	IMPACT DRILL 
RUBBER Mallet 		

We strongly recommend applying thread lock to the full length of all screws, using Wood glue for the plugs and using an impact drill. Scan the QR code with a phone or tablet to access the assembly video.

WARNING:

Always take care with an impact drill gun, especially when screwing into the pads. You will need to use the appropriate screw combinations for the different seat and back types.

INSTRUCTIONS (VENEER SEAT & BACK):

STEP 1: 	STEP 2: 	STEP 3: 	COMPLETE: 
---	---	--	---

*Upholstered seat & back instructions on next page.

PHOENIX

Timber Chairs & Stools

ez ASSEMBLY
INSTRUCTIONS



scan me

INSTRUCTIONS (UPHOLSTERED BACK & SEAT):

STEP 1:

STEP 2:

STEP 3:

COMPLETE: