


# 800x500MM

Danube & Prague Table Bases




scan me

## PARTS:

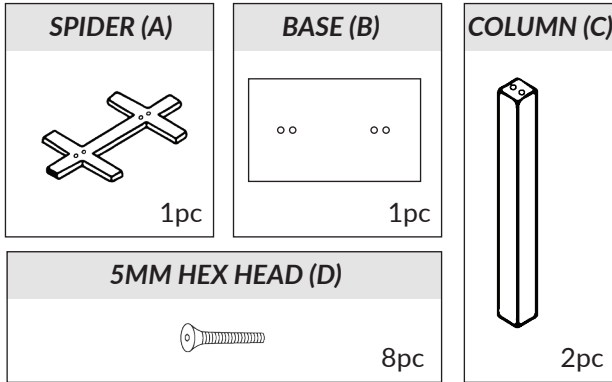

## TOOLS (NOT INCLUDED):

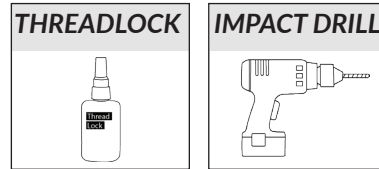

We strongly recommend applying thread lock to the full length of all screws and using an impact drill. Scan the QR code with a phone or tablet to access the assembly video.

### WARNING:

Always take care with an impact drill gun, especially when screwing into the spider (cross member).

## INSTRUCTIONS:

