

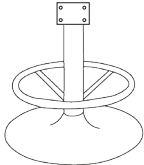











scan me

PARTS:

TOOLS (NOT INCLUDED):

SHELL (A)  1pc	SWIVEL (B)  1pc	DISC BASE (C)  1pc
WASHER (D)  8pc	NUT (E)  4pc	
5MM HEX HEAD L15MM (F)  4pc		
5MM HEX HEAD L30MM (G)  4pc		

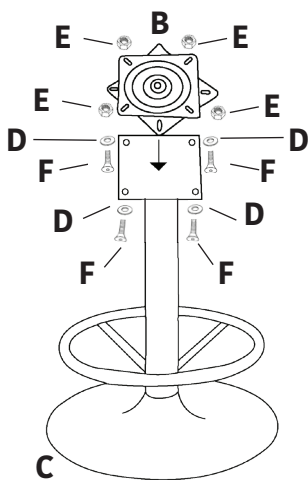
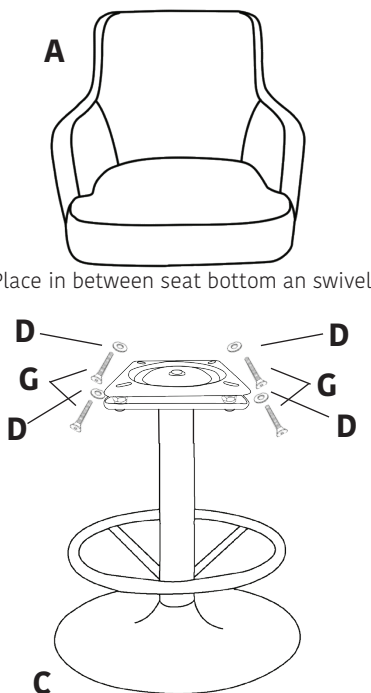
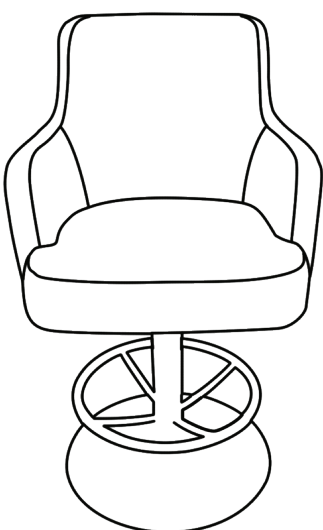
THREADLOCK 	IMPACT DRILL 	SPANNER 
--	--	---

We strongly recommend applying thread lock to the full length of all screws and using an impact drill.

WARNING:

Always take care with an impact drill gun. The structural warranty will be voided if the product has been supplied un-assembled and we find issues have resulted from faulty workmanship.

INSTRUCTIONS:

STEP 1:  Attach swivel to base.	STEP 2:  *Place in between seat bottom an swivel.	COMPLETE: 
---	--	---