

NOTES:

To achieve the best results with the assembly of our bases, we strongly recommend thread locking all screws (apply to full length of screw) and use a spanner and socket drill to tighten nuts.

PARTS:

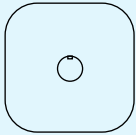

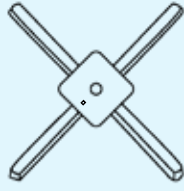






A	B	C	D	E	F	TOOL	TOOL	TOOL
								
X1	X1	X1	X1	X3	X2	NOT INCLUDED	NOT INCLUDED	IMPACT DRILL WITH 17MM SOCKET
								NOT INCLUDED

DIAGRAM:

