

NOTES:

To achieve the best results with the assembly of our base, we strongly recommend thread locking all screws (apply to full length of screw) and using an impact drill gun. Always take care with an impact drill gun, especially when screwing the frame to the shell.

PARTS:






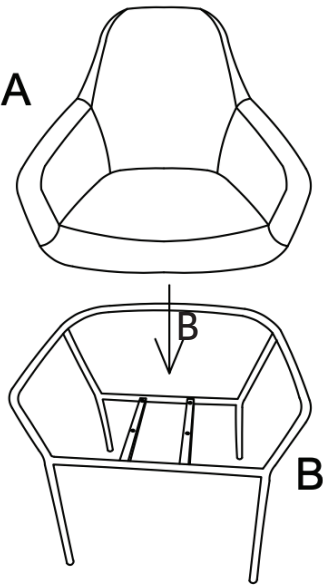
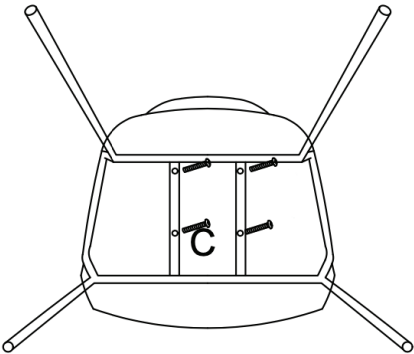
| A | B | C | TOOL | TOOL |
|---|---|---|---|--|
|  |  |  HEX HEAD 30MM |  IMPACT DRILL |  THREAD LOCK |
| X1 | X1 | X4 | NOT INCLUDED | NOT INCLUDED |

DIAGRAM:

STEP 1:

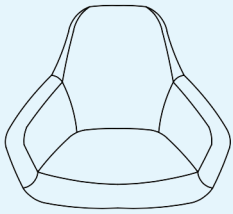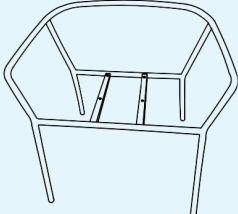

STEP 2:



COMPLETE:

