

NOTES:

To achieve the best results with the assembly of our chair, we strongly recommend thread locking all screws (apply to full length of screw) and the use of an impact drill gun.

PARTS:












A	B	C	D	E	F	G	H	TOOL	TOOL
									
X1	X1	X1	X1	X5	X1	X4 HEX HEAD 16MM	X4 HEX HEAD 14MM	IMPACT DRILL	THREAD LOCK
								NOT INCLUDED	NOT INCLUDED

DIAGRAM:

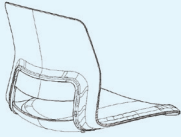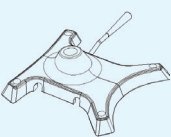
STEP 1:

Pop the 5 x castors into the frame



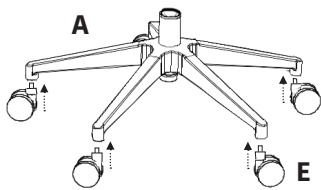
STEP 2:

Slide the gas lift into the frame

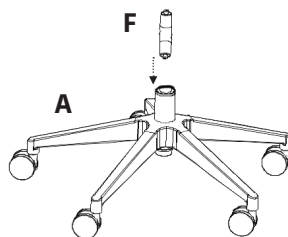


STEP 3:

Attach arms by unscrewing bar circled and placing arms parallel to lever

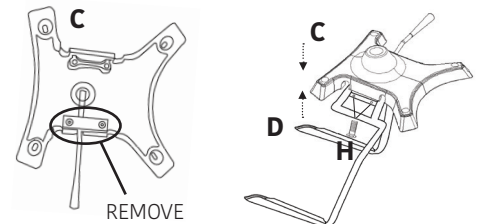


STEP 4:

Attach the bracket under the shell

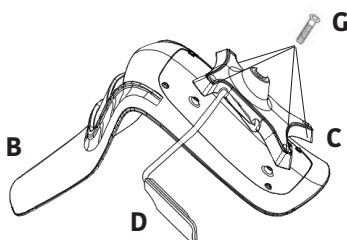

STEP 5:

Clip the base into the shell

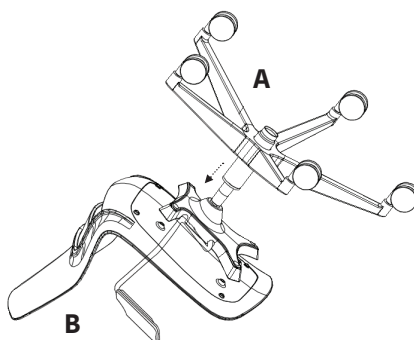

COMPLETE:

