

SNOUT CASTOR STOOL

eZ ASSEMBLY INSTRUCTIONS

NOTES:

To achieve the best results with the assembly of our stool, we strongly recommend thread locking all screws (apply to full length of screw) and the use of an impact drill gun.

PARTS:













A	B	C	D	E	F	G	H	I	TOOL	TOOL
										
X1	X1	X1	X1	X1	X5	X1	HEX HEAD 16MM	HEX HEAD 14MM	IMPACT DRILL	THREAD LOCK
							X4	X4	NOT INCLUDED	NOT INCLUDED

DIAGRAM:


STEP 1:

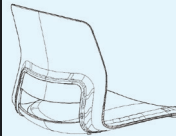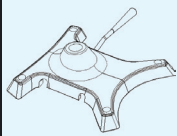Pop the 5 x castors into the frame



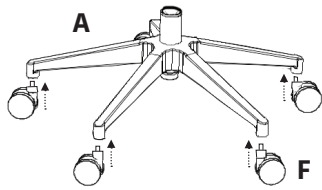
STEP 2:

Slide the gas lift and ring into frame

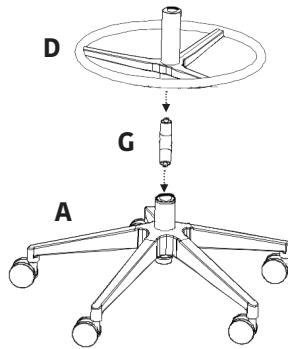


STEP 3:

Attach arms by unscrewing bar and place arms parallel to lever

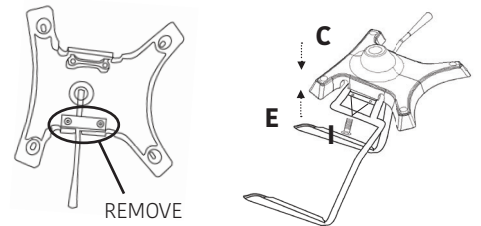


STEP 4:

Attach the bracket under the shell

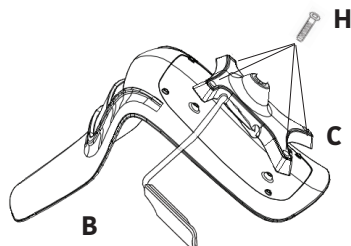

STEP 5:

Clip the base into the shell

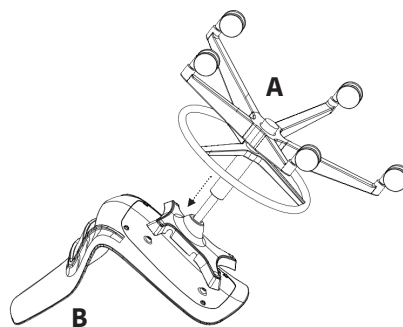

COMPLETE:

