

NOTES:


To achieve the best results with the assembly of our base, we strongly recommend thread locking all screws (apply to full length of screw) using an impact drill gun with a 19mm socket, 8mm allen key drill bit and a vice grip. Always take care with an impact drill gun, especially when screwing into the spider (cross member).

PARTS:

A	B	C	D	E	F	TOOL	TOOL	TOOL
X1	X1	X1	X5	X1	X1	IMPACT DRILL WITH 19MM SOCKET AND 8MM ALLEN KEY	THREAD LOCK	VICE GRIP
						NOT INCLUDED	NOT INCLUDED	NOT INCLUDED


DIAGRAM:

STEP 1:

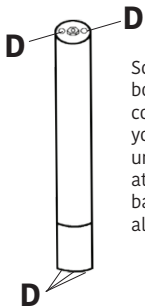


Screws (D) come in both ends of the column. Therefore, you will need to unscrew them to then attach the spider and base, using the 8mm allen key drill piece.


STEP 3:

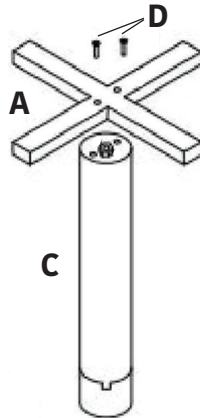

STEP 5:

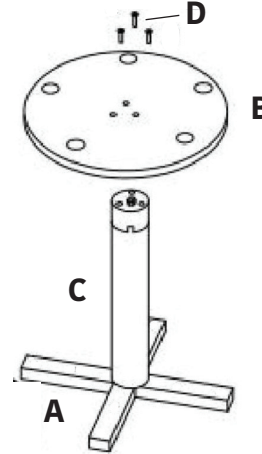


STEP 2:

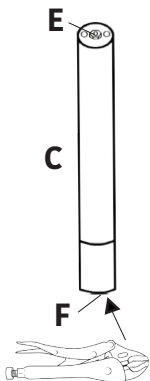

VIP IMPORTANT STEP:

The column, collar and central Booker rod are supplied pre-assembled for packaging. The nylock nut (F) will be secure, however you will need to attach the vice grip and use the socket drill to loosen nut E, apply threadlock and re-tighten.

STEP 4:

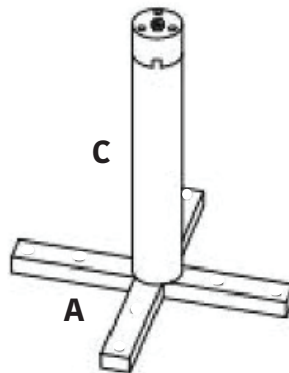

COMPLETE:

