

NOTES:

To achieve the best results with the assembly of our stool, we strongly recommend thread locking all screws (apply to full length of screw) and the use of an impact drill gun and small spanner supplied.

PARTS:

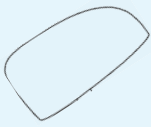

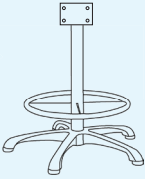











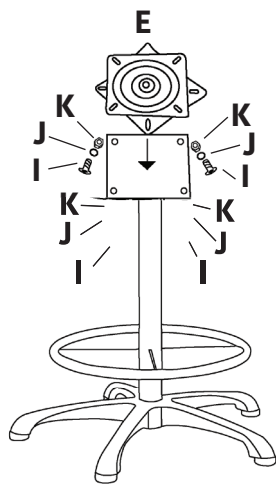
A	B	C	D	E	F	G	H	I	J	K	TOOL	TOOL	TOOL
					 HEX HEAD 4MM X 25MM	 HEX HEAD 4MM X 30MM	 HEX HEAD 5MM X 25MM	 HEX HEAD 4MM X 15MM			 DRILL GUN	 THREAD LOCK	 SPANNER
X1	X1	X1	X1	X1	X4	X4	X4	X4	X8	X4	NOT INCLUDED	NOT INCLUDED	INCLUDED FOR K NUT

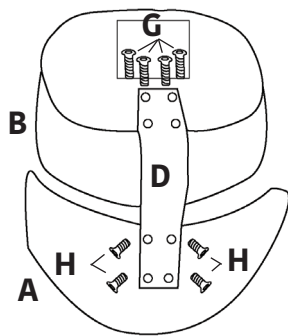
DIAGRAM:

STEP 1:

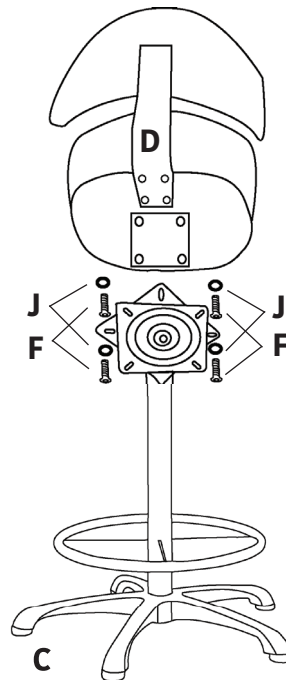


C

STEP 2:



STEP 3:



C

COMPLETE:

