

NOTES:


To achieve the best results with the assembly of our stool, we strongly recommend thread locking all screws (apply to full length of screw) and the use of an impact drill gun.

PARTS:

Α	В	С	D	E	F	TOOL	TOOL
				HEX HEAD 4MM	(Internal designation of the control	IMPACT DRILL	THREAD LOCK
X1	X1	X1	X4	X4	X4	NOT	NOT
						INCLUDED	INCLUDED

DIAGRAM:

STEP 1:

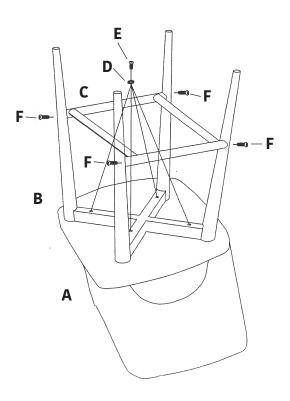

COMPLETE:

