

NOTES:


To achieve the best results with the assembly of our chair, we strongly recommend thread locking all screws (apply to full length of screw) and the use of an impact drill gun.

PARTS:

_	Α	В	С	D	TOOL	TOOL
				COLUMN MEAD HEX HEAD 4MM	IMPACT DRILL	0 THREAD LOCK
	X1	X1	X1	X7	NOT INCLUDED	NOT INCLUDED

DIAGRAM:

STEP 1:

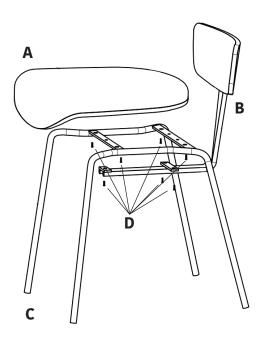

COMPLETE:

