

SNOUT CASTOR CHAIR

eZ ASSEMBLY INSTRUCTIONS

NOTES:

To achieve the best results with the assembly of our chair, we strongly recommend thread locking all screws (apply to full length of screw) and the use of an impact drill gun.

PARTS:









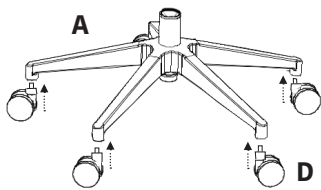
A	B	C	D	E	F	TOOL	TOOL
					 HEX HEAD 14MM		
X1	X1	X1	x5	X1	X4	NOT INCLUDED	NOT INCLUDED

DIAGRAM:


STEP 1:

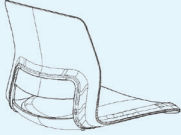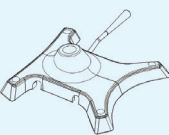*Pop the 5 x castors into the frame




STEP 2:

*Slide the gas lift into the frame

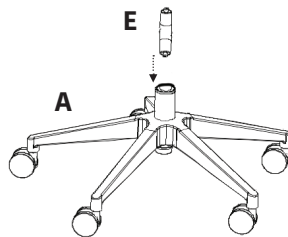


STEP 3:

*Attach the bracket under the shell

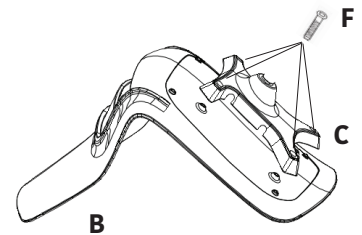

STEP 4:

*Clip the base into the shell

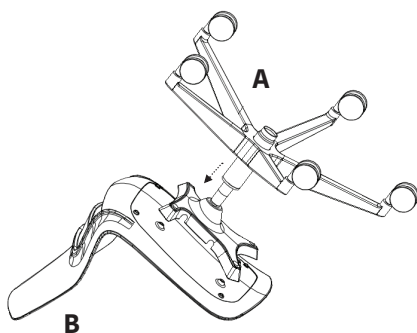

COMPLETE:

