RIALTO UPHOLSTERED STOOL

ez ASSEMBLY INSTRUCTIONS

NOTES:

To achieve the best results with the assembly of our stool, we strongly recommend thread locking all screws (apply to full length of screw) using an impact drill gun and pvc gluing all dowels and plugs. Always take care when screwing into the frame.

PARTS:

A	B	C	D	E	F	G	H	I	TOOL	TOOL	TOOL
			HEX HEAD 4MM L75MM	4MM COUNTER SUNK L25MM	FLAT WASHER	SPRING WASHER	DOWEL	PLUG	IMPACT GUN	THREAD LOCK	PVC GLUE
X1	X1	X1	X4	X4	X8	X8	X2	X4	NOT INCLUDED	NOT INCLUDED	NOT INCLUDED
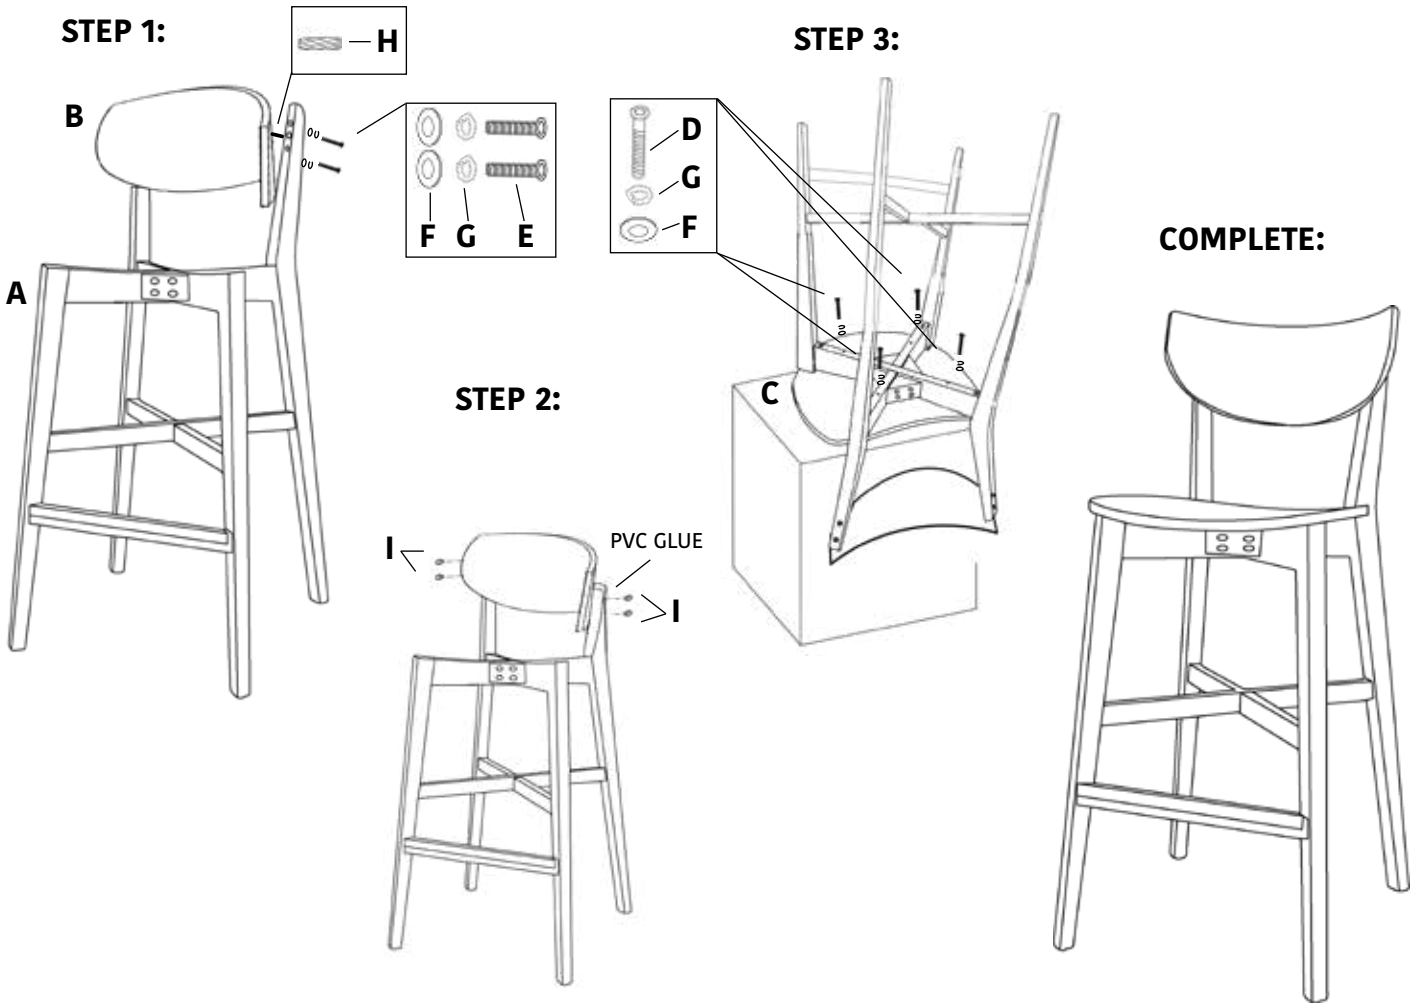
DIAGRAM: